

Top Entry Air Swivel

1. Connect mounting bracket to boom using mounting hardware provided. There are two holes provided to clamp the air swivel mounting bracket in place.
2. Attach the air swivel to the top side of the air swivel coupling.
3. Connect the air hose into the air swivel coupling on the underside of the bracket.
4. Connect the air supply from an overhead source into the air swivel.
5. Rotate the crane to its full degree of rotation in both directions to ensure both air hoses are free from obstruction and no binding occurs.
6. Check all fittings for leaks and assure connections are securely fastened.

Refer to drawing AJ360 - TEAS for additional references.