

Top Entry Air Swivel for FS300, FS350 & FS350S

1. Connect top entry air swivel assembly to boom by aligning the mounting holes of the air swivel mounting plate with the existing mounting holes previously drilled on top of the boom. The center line of the pivot should be aligned with the center line of the mast assembly.
2. Connect the lifting device to the air swivel coupling on the underside of the bracket, labeled outlet on the drawing.
3. Connect the air supply from an overhead source into the air swivel, labeled inlet on the drawing.
4. Rotate the crane to its full degree of rotation in both directions to ensure both air hoses are free from any obstructions.
5. Check to make sure all fittings and connections are securely fastened and will not leak.

Refer to drawing TEAS for additional references.