



Figure 1. Bridge-Runway Connection

Assemble Hose Connection

1. Place bulkhead fitting through incoming air side of tagline bracket. Secure with locking washer and hex nut provided (**figure 2**).
2. Connect 1/2" 45° flared tube connector x 1/2" NMPT to bulkhead.

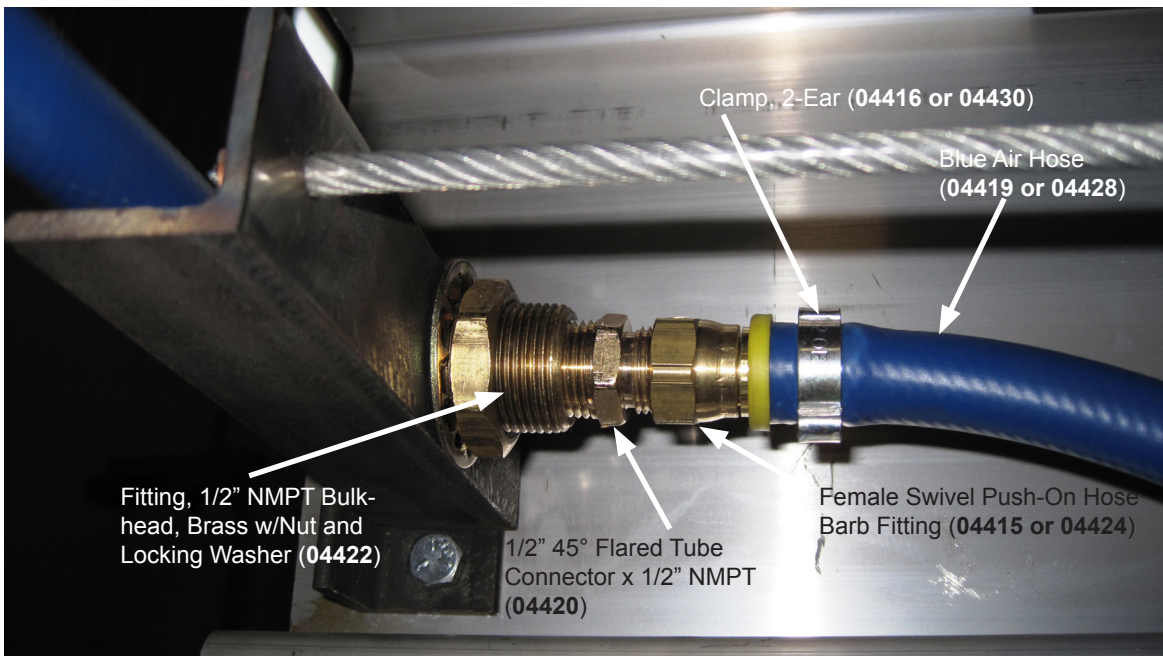


Figure 2. Hose connection.

3. Connect elbow, 1/2" 45° flared tube x 1/2" NMPT brass 90° elbow to bulkhead fitting (**figure 3**).

Assemble Hose (repeat steps for connection on supply side in **figure 3**)

4. Slide 2 ear clamp over blue air hose.
5. Insert female swivel push-on barb hose fitting into blue air hose.
6. Secure 2 ear clamp with clamp pincers.
7. Connect assembled hose ends to connections and on either side of bulkhead.

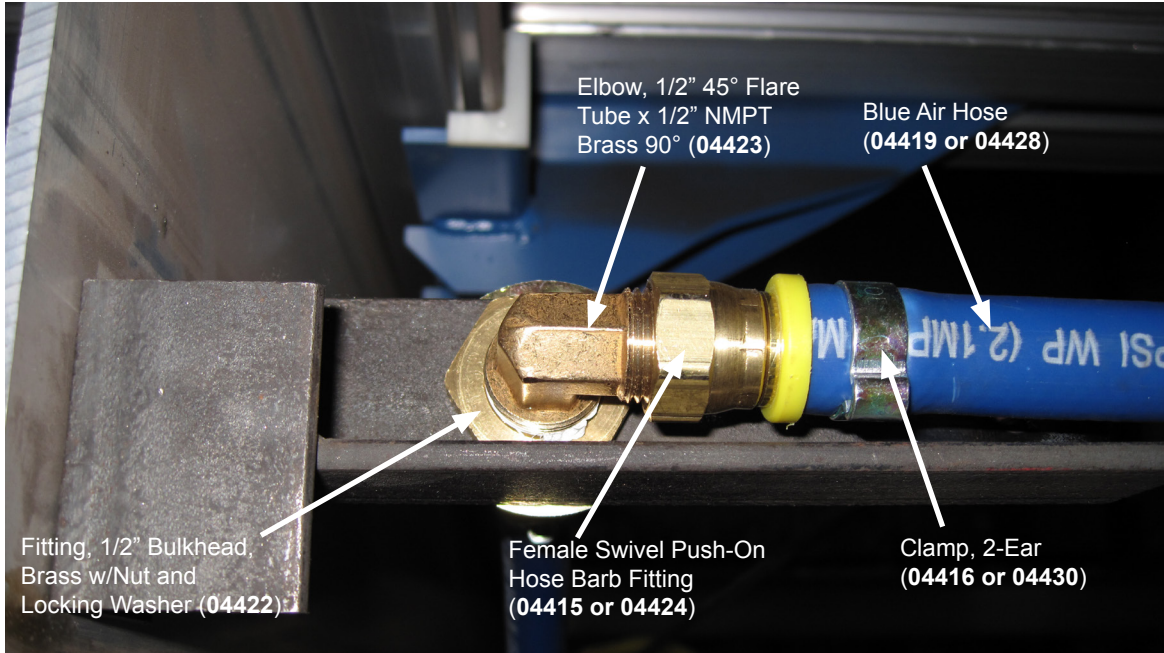


Figure 3. Incoming air connection.

Hose to Hose Connection

8. Slide 2 ear clamp over PVC blue air hose (**figure 4**).
9. Slide 2 ear clamp (5/8") over nylon coiled tubing.
10. Insert barbed hose fitting (not shown) into either end of tubes and press firmly together.
11. Slide clamps into position approximately half-way on barb ends and clamp with pincers.

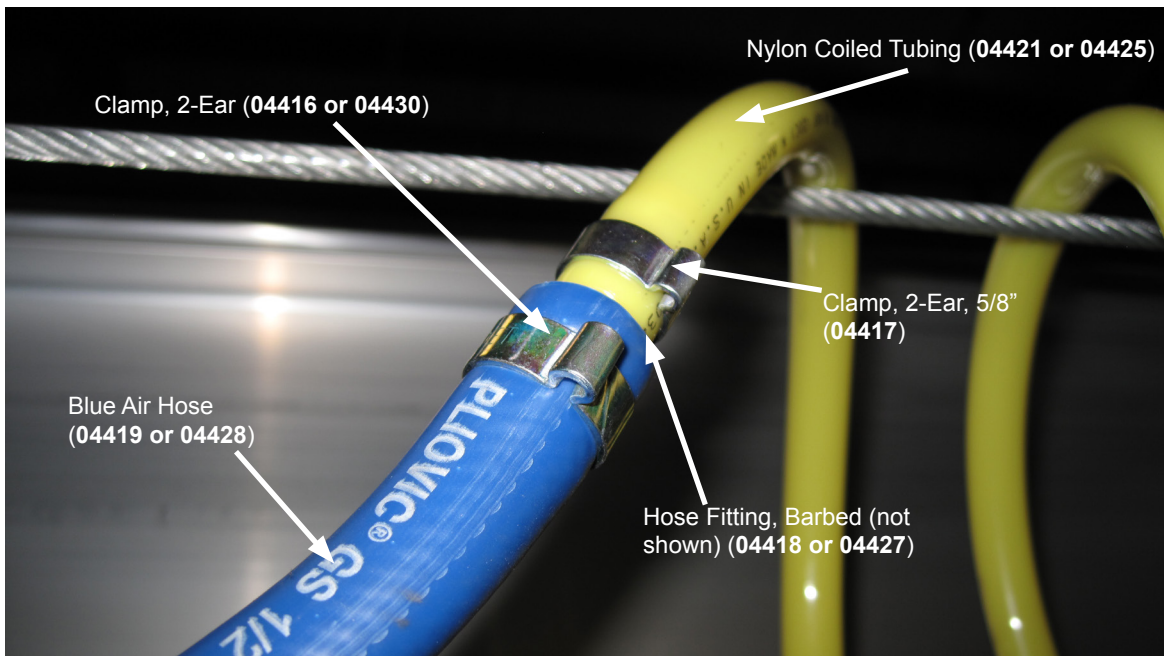


Figure 4. Hose to hose connection.

Tagline Installation

- Adjust the tension in the tagline by tightening the nut on the outside of the bracket at the opposite end of the tagline from Step 5 (*figure 5*).

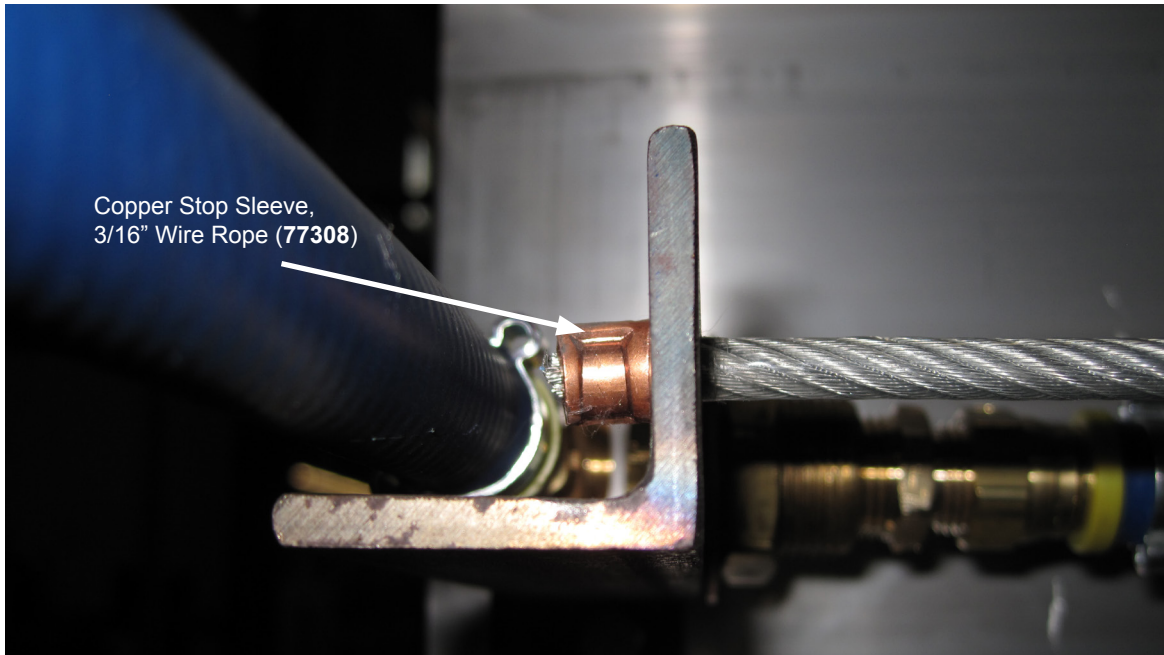


Figure 4.



Figure 5.